


# FELICIA FUN




EN

Supplement to FELICIA Owner's Manual ..... 1

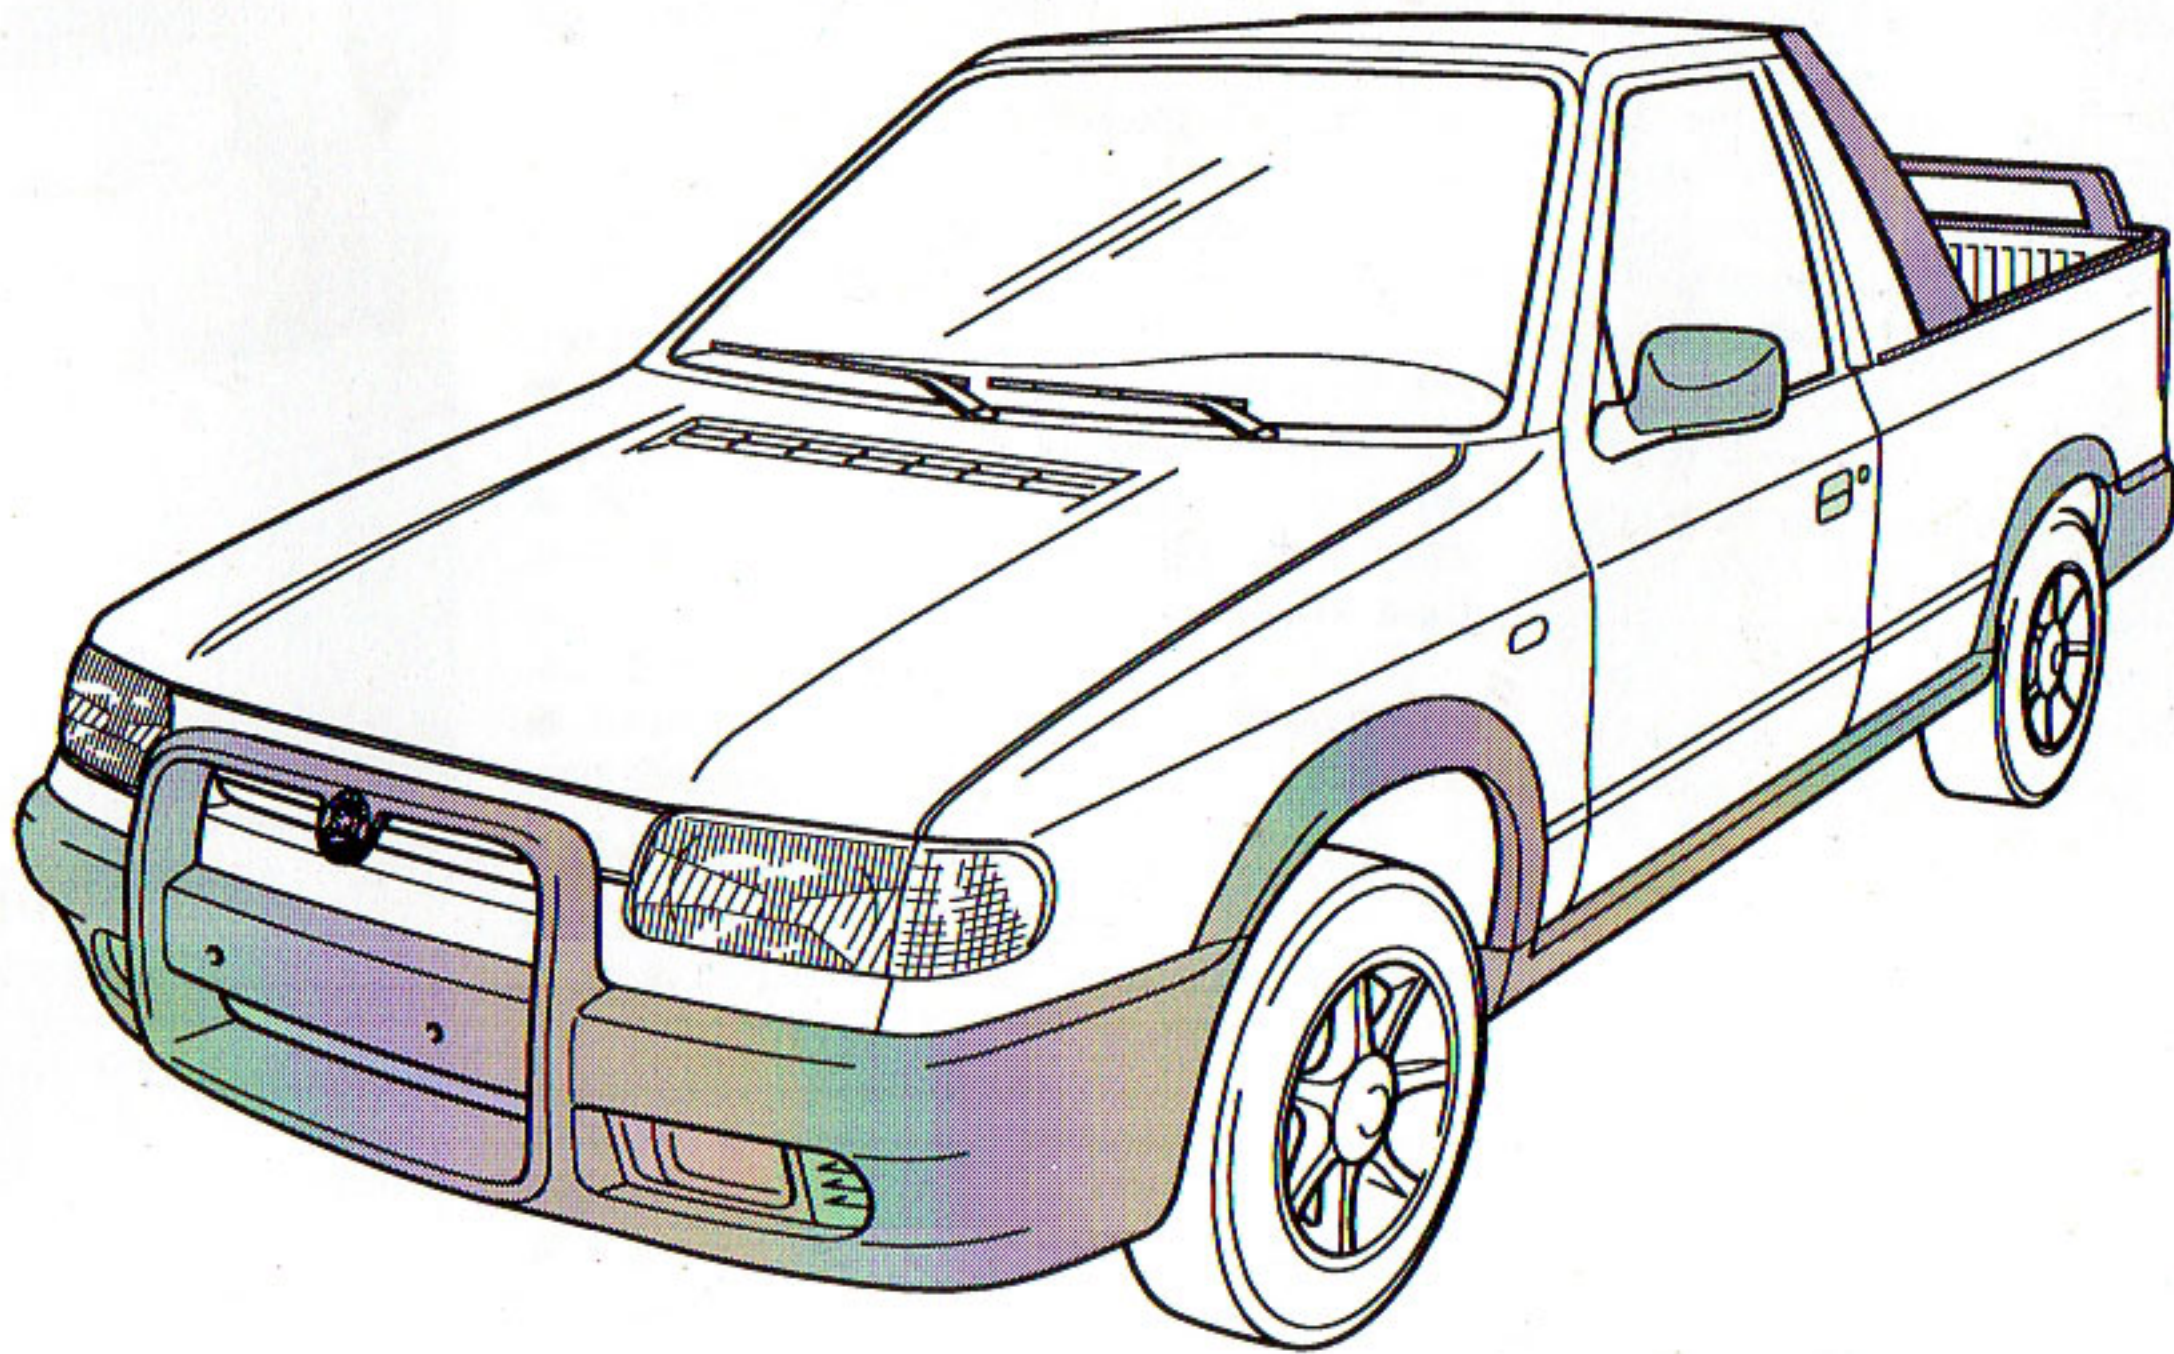

## Rear panel

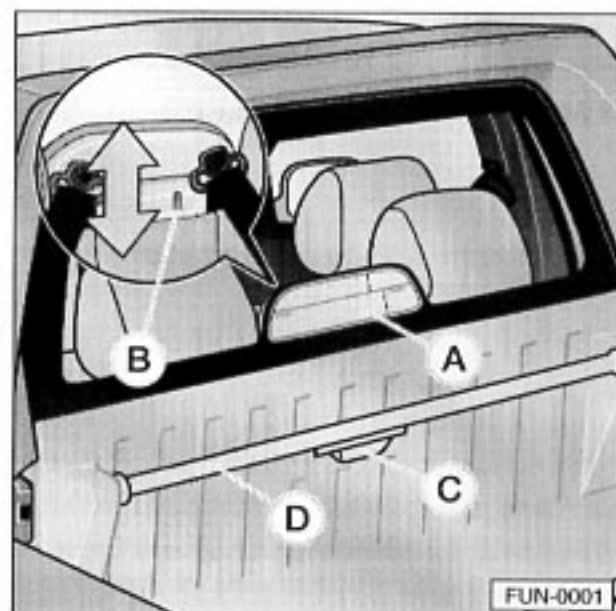

### Folding down rear panel

#### Warning

Pay attention to instructions on sticker A.

It is essential to follow the instructions for folding down the rear panel otherwise the rear panel may be damaged.

When folding down the rear panel, the person who is doing this, should be in the rear loading area of the vehicle.

- Push locking knob **B** (on inside of car) down and unlock rear panel.
- Release the rear panel with the aid of lever **C** and strut **D** and tilt back slightly.
- Raise rear panel at the strut when it is tilted and pull it back as far as the stop.
- After this, lower again and insert into the lock so that the locking pawls of the locks are heard to engage.
- Pull on the strut **D** to check whether the rear panel is correctly locked in place.
- Raise the rear seat belts and fold the seat surfaces back so that the seat belts do not remain positioned below the seat and are damaged.
- After this, push locking knob **B** up again and secure the rear panel.

### Folding rear panel forward

- Fold seat surfaces forward.
- It is recommended to fit the seat belt buckles together before again folding the seat surfaces forward.
- Push locking knob **B** down and unlock the rear panel.
- Release rear panel with lever **C**.
- Raise rear panel at the strut and push it forward.
- Pull on the strut **D** to check whether the rear panel is correctly locked in place.

- After this, push locking knob **B** up again and secure the rear panel.

#### Warning

Before folding back the rear panel, it is necessary for safety reasons to seal the drain openings on the loading area, on the left and right next to the rear panel, using the original production plugs (ECE 34.01 regulation).

When pulling the rear panel forward and back, ensure that the rear panel moves evenly, without striking the driver cab. Improper movements on the rear panel will result to damage to the panel and the driver cab.

## OPERATION

### Front seats




#### Folding front passenger seat forward

- Pull the lever for the forward/back adjustment and move the seats into the front end position. Push the head restraints down as far as the stop into the bottom position.
- Pull the lever in the direction of arrow 1 or 2. This releases the seat and it can be tilted in direction of arrow 3.
- Tilt back seat in the opposite direction of arrow 3 until it has locked in place. Push seat back and forward to check whether it is properly locked.

[www.skodafeliciafun.co.uk](http://www.skodafeliciafun.co.uk) - a useful website for owners and enthusiasts of the Skoda Felicia Fun Pick Up

### Tow-starting and towing car

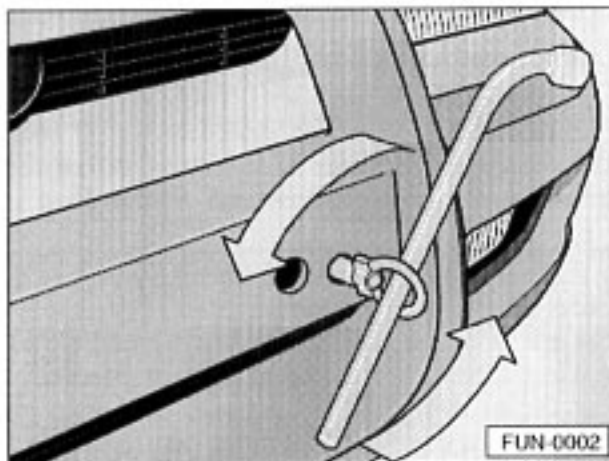


#### Front towing eye

The opening for the towing eye is located on the front side of the bumper below the vehicle identification.

- Push vehicle identification slightly to the right (in direction of arrow).
- The towing eye has a left-hand thread. Screw in towing eye by hand in direction of arrow as far as the stop. Tighten towing eye slightly e.g. using a wrench from the vehicle tool kit.

### Frame of tailgate

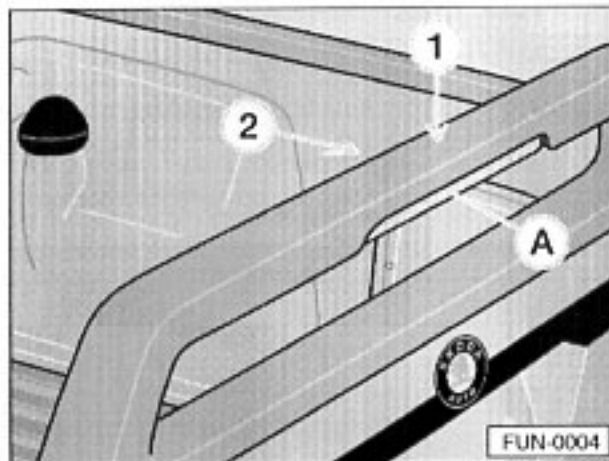

#### Frame of tailgate with centre high-mounted brake light

Maximum permissible load of frame in direction arrow 1 is 100 kg.

Maximum permissible load of frame in direction arrow 2 is 75 kg.

The bulbs of the centre high-mounted brake light (item A) should be changed in a Škoda dealership.



## Natural leather

Depending on the amount of wear, leather should be treated from time to time in accordance with the instructions below. **It is important to note that leather must on no account be treated with solvents, floor wax, shoe cream, stain remover or similar products.**

For normal cleaning of leather-trimmed steering wheels, leather seat covers etc., slightly moisten a cotton or woollen cloth with water and clean the soiled surfaces of the leather. More severely soiled points can be cleaned with a mild soap solution (2 teaspoons of neutral soap in 1 litre of water). **It is important to note that the leather must not become moistened through at any point and that no water is able to drip through the stitching.** Following this, wipe dry with a soft, dry cloth.

In addition, it is recommended that leather which is subject to normal wear and tear should be treated every six months with the leather care product which is available from your Škoda dealer. This product should be applied extremely sparingly. Allow it to take effect, and then wipe off with a soft cloth.

## Performance

Engine	Top speed (km/h)	Acceleration 0-100 km/h (s)
1.6 MPI 55 kW	163 <sup>1)</sup>	12.5 <sup>1)</sup>

<sup>1)</sup> Without tarpaulin

## Fuel consumption conforming to ECE R84

Engine	90 km/h	120 km/h	Urban cycle
1.6 MPI 55 kW	6.0	8.4	8.7

## Fuel consumption conforming to directive 93/116 EEC

Engine	Urban cycle	Open road	Third mix	CO <sub>2</sub> (g/km)
1.6 MPI 55 kW	9.7	6.2	7.5	179

## TECHNICKÉ ÚDAJE

### Weights

Permissible gross weight (kg)	1480
Unladen weight ready for the road <sup>1)</sup> (kg)	1035 - 1110
Permissible front axle load (kg)	770
Permissible rear axle load (kg)	840
Permissible roof load (kg)	50
<b>Permissible trailer loads</b>	
Trailer with brake <sup>2)</sup> (kg)	750
Trailer without brake (kg)	400
<b>Permissible drawbar load of trailer drawbar on ball head of trailer coupling</b>	
max. (kg)	50
min. (kg)	25

<sup>1)</sup> The figures stated apply to the base version and to certain model versions and optional equipment. Retrofitting accessories reduces the payload accordingly.

<sup>2)</sup> For inclines up to 12%.

### Dimensions

Length	mm	4245
Width	mm	1680
Height at unladen weight	mm	1465±20
Height at permissible gross weight	mm	1415±20
Ground clearance at permissible gross weight	mm	140
Turning circle diameter (outer part of body)	m	11.2
Capacity of luggage compartment (at level of side parts with rear panel tilted)	dm <sup>3</sup>	743

### Wheels

Tyre size	on wheel
165/80 R13 83 T	5" x 13 H2

### Tyre inflation pressure (kPa/bar)

Tyre size	Payload	front	rear
165/80 R13 83 T	up to half	200/2.0	240/2.4
	up to full	230/2.3	300/3.0

Škoda Auto is constantly working on the further development of all vehicles and models. For this reason, it is possible that modifications to the products supplied in terms of shape, equipment and engineering, may be introduced at any time. The data, illustrations and descriptions in this Owner's Manual are therefore of an informative nature only.

Reprinting, reproduction or translation (also of extracts) is not permitted without the written approval of Škoda Auto. All rights pertaining to copyright laws are vested in Škoda Auto. Subject to modification.

© 1999 ŠKODA AUTO a. s.

