


# FELICIA FUN


Extra Stuff !

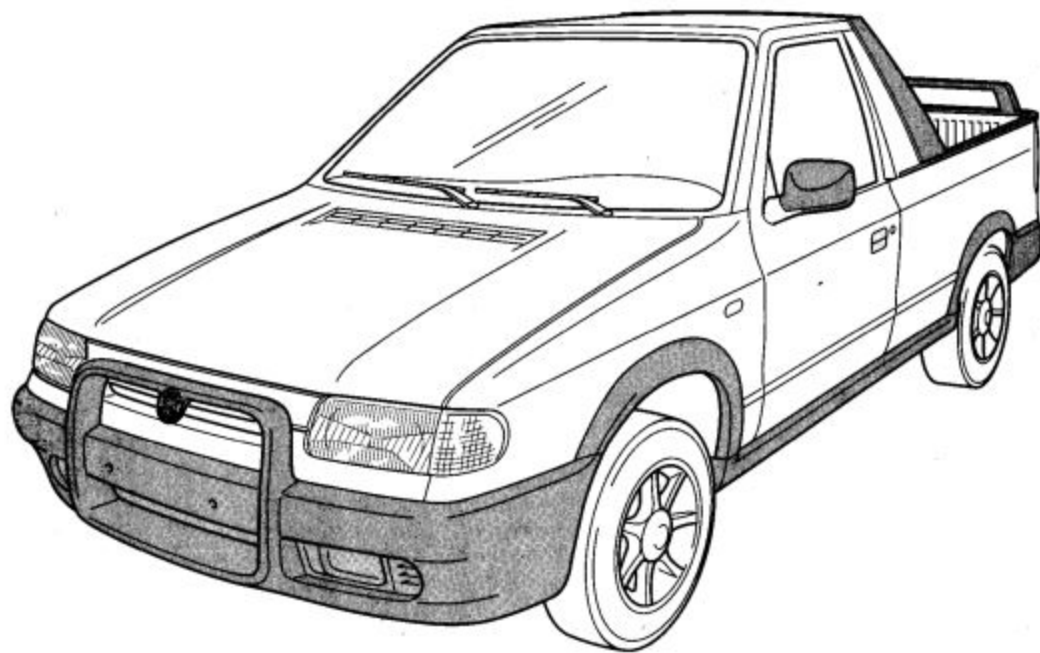

[www.skodafeliciafun.co.uk](http://www.skodafeliciafun.co.uk) - a useful website for owners and enthusiasts of the Skoda Felicia Fun Pick Up

## Instructions

### Rear Roof

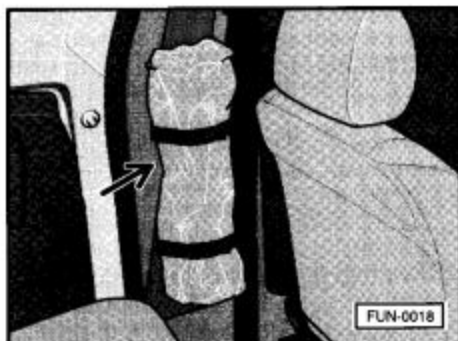

#### Storage of the roof cover and the roof frame

The roof cover is in a packaging and is fastened with straps on the left behind the driver's seat (right-hand drive vehicles on the right).

The roof frame is in a similar package and is attached to the right behind the front passenger seat (on the left in vehicles with right-hand drive).

#### Note

The roof cover is used to protect the rear passengers in the rain.  
If the vehicle is parked downhill with the roof in place in continuous rain, water can get over the threshold into the driver's cab.



#### Put up the roof

Fold back the bulkhead.

Take the roof frame out of the packaging.  
Set up the roof frame so that the slope of the peg on the three struts points downwards - see arrow A.


Insert the assembled frame into the plastic guides above the rear shock absorber - see arrow B.

Insert the three struts into the receptacles in the frame of the driver's cab.


When assembling the roof frame, make sure that the paintwork of the vehicle is not damaged!



Take the roof cover out of the packaging. Guide the right side of the cover from the middle - see arrow C - into the guide in the frame of the driver's cab and pull it to the right (in the direction of the arrow) to the end of the guide. Fasten the left half of the cover in the same way.

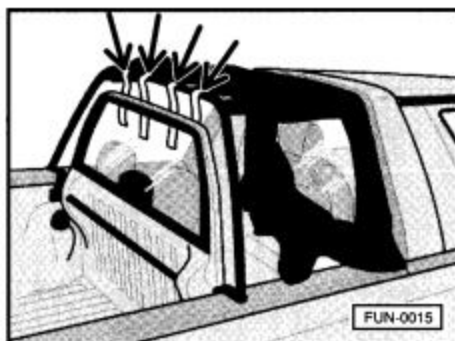

Place the four belt straps with Velcro fastening in the roof area of the cover - see arrows - over the bracket of the roof frame and pull it through the gap between bracket and bulkhead into the interior. Pull the cover backwards over the frame so that the rear part of the cover is above the bulkhead. Check the correct installation position of the struts in the frame of the driver's cab.

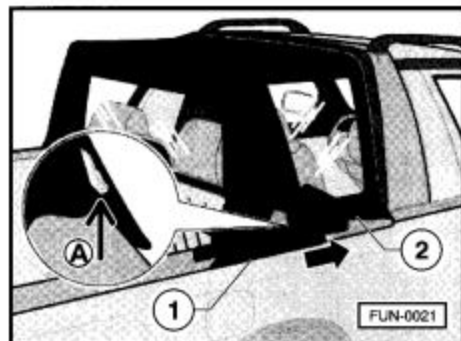

The tensioning element 1 on the loop - grab it and insert it from the driver's cab into the groove in the side wall. Push the tensioning element behind the bracket of the roof frame. Pull the cover down on the right-hand side and push the tensioning element approx. 10 cm forward onto the tensioning rail of the cover ("U" profile). Fasten the tensioning element and the cover on the left-hand side in the same way. Hold the lower edge of the cover 2 with one hand and use the loop to push the tensioning element forward until it is covered by the cover. Fasten the cover on the left side in the same way.


## Instructions



If necessary, tension the cover equally by pushing the tensioning element forwards. Fasten the loose side parts of the cover to the tensioning element using Velcro. Pull the tabs inwards at the front and also attach them to the frame of the driver's cab using Velcro fasteners - see arrow.



Tighten the four straps from inside the vehicle and attach them to the roof surface using Velcro fasteners.

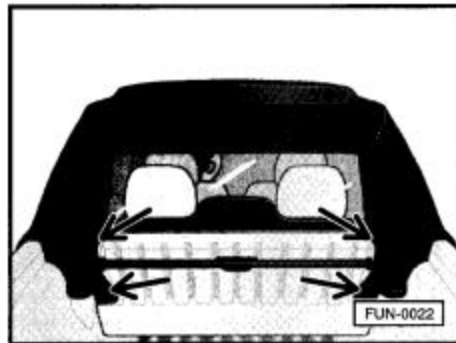


Tension the rear side cover parts and fasten them to the Velcro fasteners on the bulkhead - see arrows.


### Remove Cover

Loosen the four straps from the roof surface. Loosen the flaps of the cover at the front of the frame of the driver's cab. Loosen the Velcro fasteners on the bulkhead. Loosen the Velcro fasteners on the clamping elements. Pull the cover down slightly with one hand. With the other hand, pull the tensioning element on the loop backwards out of the tensioning rail of the cover. Loosen the cover on the other side in the same way. Pull the rear part of the cover upwards and then forwards over the roof frame.



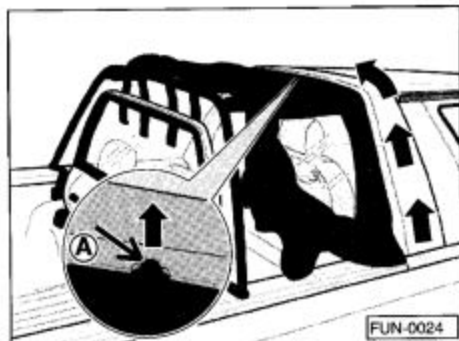

Press the edge of the cover in the middle area of the roof out of the guide in the frame of the driver's cab - see arrow A-. First slide the right and then the left half of the cover out of the guide.

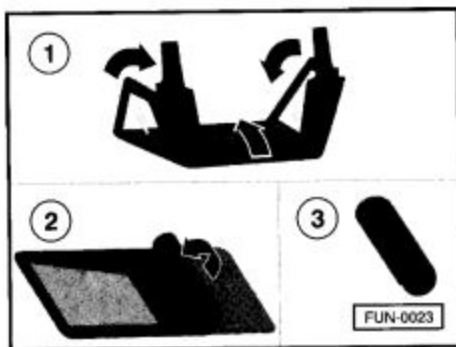

### Folding the cover

Place the cover on a clean, level surface with the roof outer surface facing down. Lay the side parts inwards. Do not kink the side window. Roll up the cover from the side. Place the rolled up cover with the tensioning elements in the packaging. Fasten the packaging back in the vehicle. Dismantle the roof frame, place it in the packaging and fasten it again in the vehicle.

### Note:

Pack the cover and the roof frame only when they are clean and dry.

### Maintenance


Do not drive through a car wash with the roof in place - the roof frame can be damaged. Do not use organic solvents to clean the cover. The cover and the roof frame are maintenance-free. If the cover is dirty, clean it with a fine brush and soapy water.

Wipe the plastic windows with a soft sponge or cloth.

After cleaning, rinse the cover with clear water and let it dry.

## Instructions

### Side storage boxes

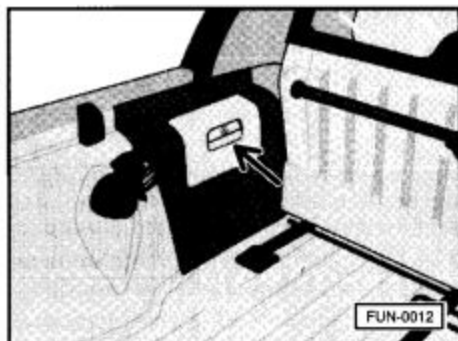

After unlocking with the vehicle key, open the storage boxes by pulling the handle. The side storage boxes can also be used as armrests.

#### **Danger**

For safety reasons, the side storage boxes must be closed during the journey.

### Front seats




#### **Folding the front passenger seat forward » and backwards**

Push the seat forward as far as it will go.  
Press the headrest fully into the backrest.  
Release the lock by pressing the lever in the direction of arrow 1 or the lever in the direction of arrow 2 and tilt the seat forward - direction of arrow 3.

Fold the seat back against the direction of arrow 3 and check whether it is properly locked.


## Self Help

### First Aid Kit

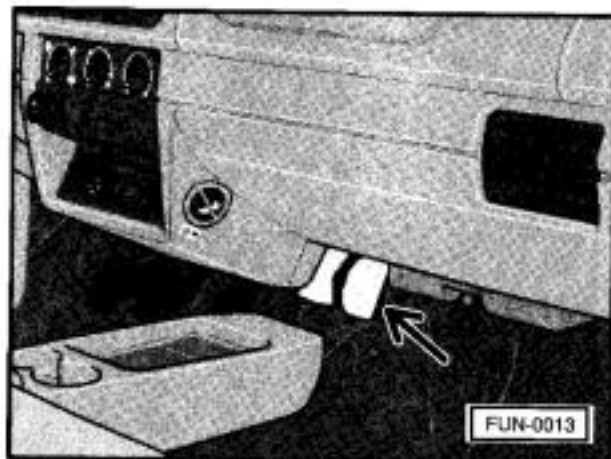

The first-aid kit \*) is fastened with an elastic band under the control panel next to the fuse box - see arrow.

### Warning triangle, Tool kit

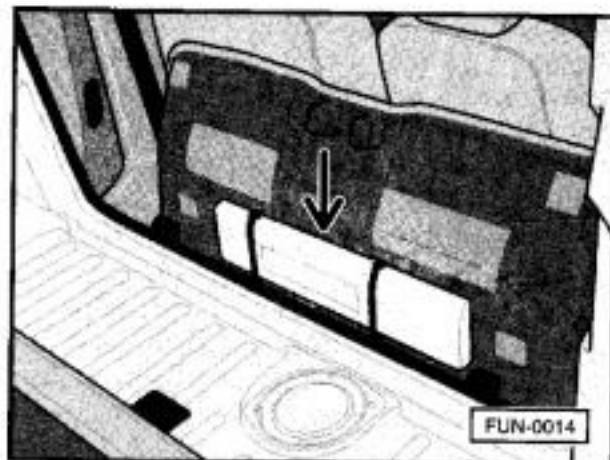

#### Warning triangle \*)

The warning triangle is attached to the underside of the rear seat bench with rubber bands - see picture. After folding up the rear bench seat, the warning triangle can be easily removed.

#### Tool kit

The tool kit is located under the front passenger seat.

After folding the seat forwards, the tool kit can be removed.

\*) Not included in the scope of delivery of the vehicle. It is recommended to buy it from a Skoda dealer.

\*) Not included in the scope of delivery of the vehicle. It is recommended to buy it from a Skoda dealer.